



18 Connect the supply hoses to the valves.	19 Connect the supply hoses to the supply stops.	20 Turn ON the water supplies. Check for leaks.	21 Remove the aerator.	22 Run water to flush debris.
23 Turn OFF the water. Install the aerator.				
Questions? Problems? For additional a KALLISTA's Customer Service Departr (1-888-452-5547) or kallista.com.	assistance, please contact nent at 1-888-4-KALLISTA			© 2019 KALLISTA