
ш **LUXURY ITALIAN** It's all about the experience Z <u>~</u> BADEN HAUS S.p.A. SINCE 1979 www.badenhaus.it

RETRO Series

Features:

Drawers push-open and soft-close Handleless ergonomic continous drawer Includes fully adjustable drawersliders Fully finished interiors Includes installation hardware Micro-Density Fiberboard (MDF) construction PVC finish resists moisture and scratches

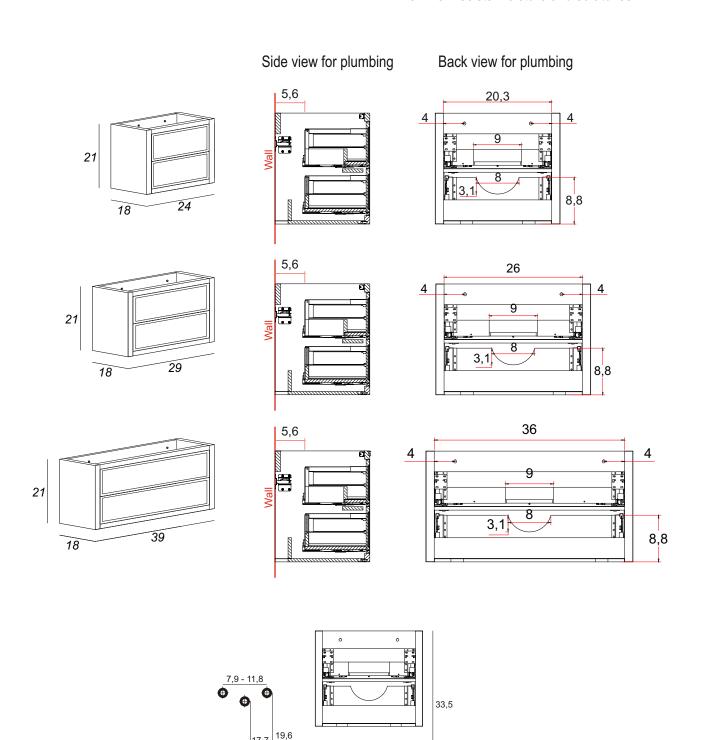


17,7





Features:


Drawers push-open and soft-close
Handleless ergonomic continous drawer
Includes fully adjustable drawersliders
Fully finished interiors
Includes installation hardware
Micro-Density Fiberboard (MDF) construction
PVC finish resists moisture and scratches

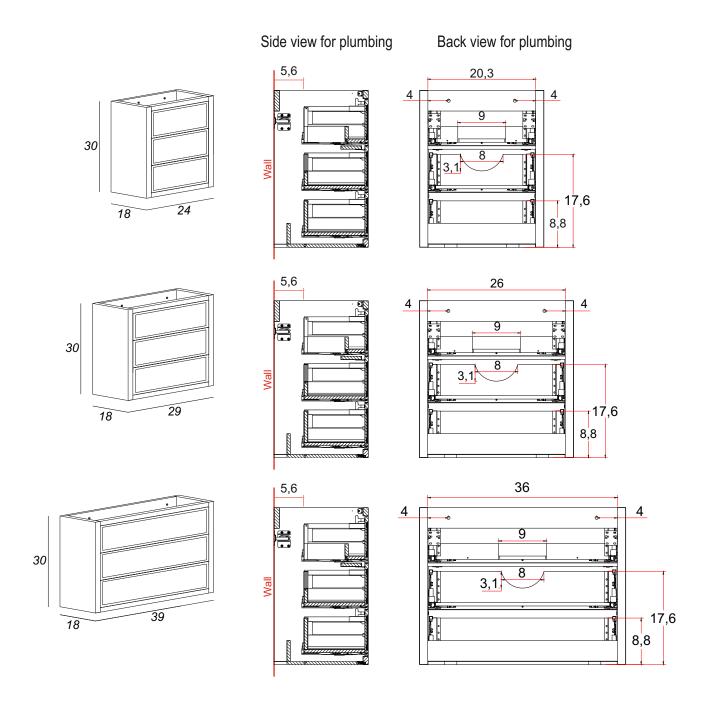



Features:

Drawers push-open and soft-close
Handleless ergonomic continous drawer
Includes fully adjustable drawersliders
Fully finished interiors
Includes installation hardware
Micro-Density Fiberboard (MDF) construction
PVC finish resists moisture and scratches

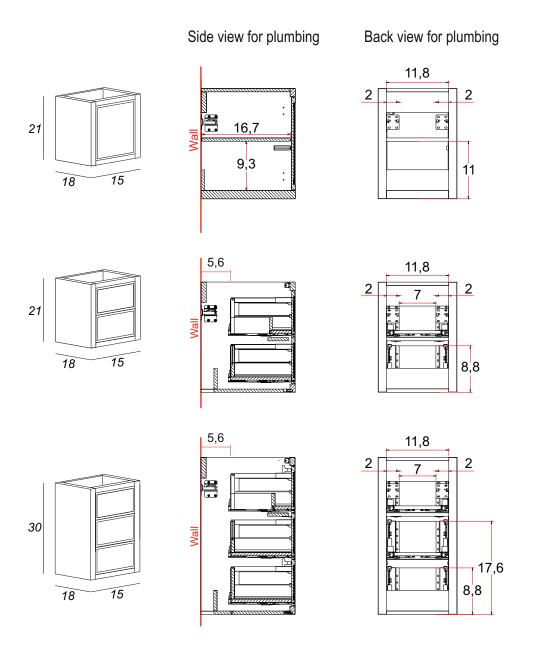





Follow the above instructions to create the perfect bathroom furniture for your needs:

Select the white matt or black matt finishing for base unit.

2 drawers base unit







2 Decide if add hardwood feet.







3 Match it with the following glass finishings for frontal drawers.



24/29/39












4 Choose among several washbasins.







combined with

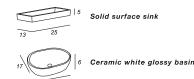

5 Decide if add single base units.

1 door single base unit



2 drawers single base unit





combined with:





FURNITURE CHARACTERISTIC



Cabinet in MDF, sides thickness 1,57in and drawers thickness 0,63in, entirely painted with micro-structural polyurethane paint. Furniture is made of buildable units and comes with 2 or 3 drawers, with option of hardwood feet. Inner finish textile effect with dividers to optimize all spaces.



Blum push slides guaranteed for 60.000 cycles and allow the adjustment in 2 different positions. Slides used in furnitures allow push opening and soft closing with synchronizer. Slides sides with frosted glass sheet. Hinges used in complementary allow the adjustement in 3 different positions.



Resin sinks with 0,98in thickness are high temperature and impact resistant. Also ceramic basin with 0,7in thickness are high temperature and impact resistant. Solid surface white mat tops with 0,47in thickness are impact resistant and can be combined with white glossy ceramic basin or solid surface sinks. Tops are not perforated so it is possible to have washbasin and faucet in any positions: center, right, left or wall position.



It is not necessary to assemble the cabinet (product not in kit).

MIRRORS



Mirror lighting full-led guarantee an energy saving of a 80/90% compared to a classic incandescent or halogen lighting and life of about 3/5 times higher.



The LED lighting can exceed 50.000 hours of activities, reducing costs of maintenance. Not produce heat and withstand the high temperatures.

□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |
□ 10.000 |



Unlike normal halogen lamps do not contain mercury and do not emit harmful UV rays for the health.




Install this product according to the installation guide Spcial site preparation is required.

Wall bracing and Baden Haus supplied hardware are recommended.

The plumbing must be roughed into the plumbing cutout area of the vanity.

Refer to the sink rough-in and the vanity rough-in for proper placement. The water supply and drain lines must be installed before installing the vanity.

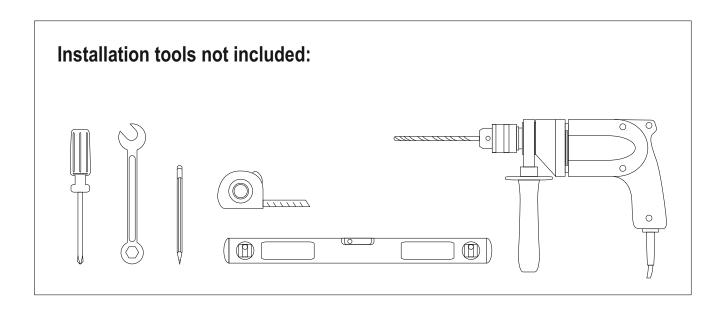


Materials Included: 8 nylon rawlplug 8 screws 2 wall plate X8 X8 X2




Step 1

Pull out completely the drawers and take off from the slide rails.

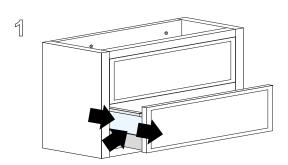

Step 2

Determine the ideal location of your new vanity. Mark the holes and drill pilot holes in the dry wall.

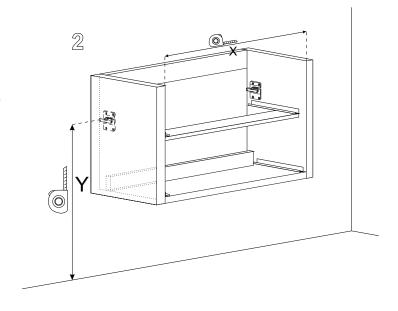


Step 3

Place the wall brackets on the finished wall and install at the locations drilled with the screws as shown here.

According to measures taken on step 2, make drills with diameter 0,3in. For each wall plate must be made 4 holes. Then insert nylon rawlplug for each drill.

Fix wall plate to wall using screws. After that plates are strongly fixed on wall, you can install vanity on wall.

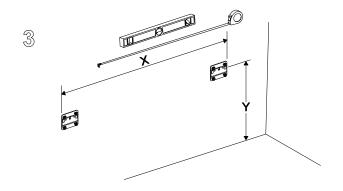





Step 4It is possible to adjust the vanity using the adjusting screws.

Step 5

Fully extend the slide rails out.
Place the drawer into the slide rails. To secure drawer, close the drawer until a series of clicks are heard.

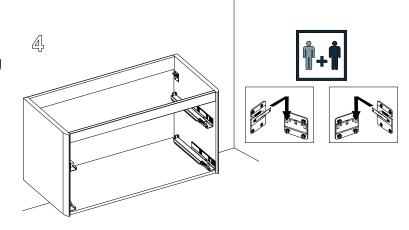

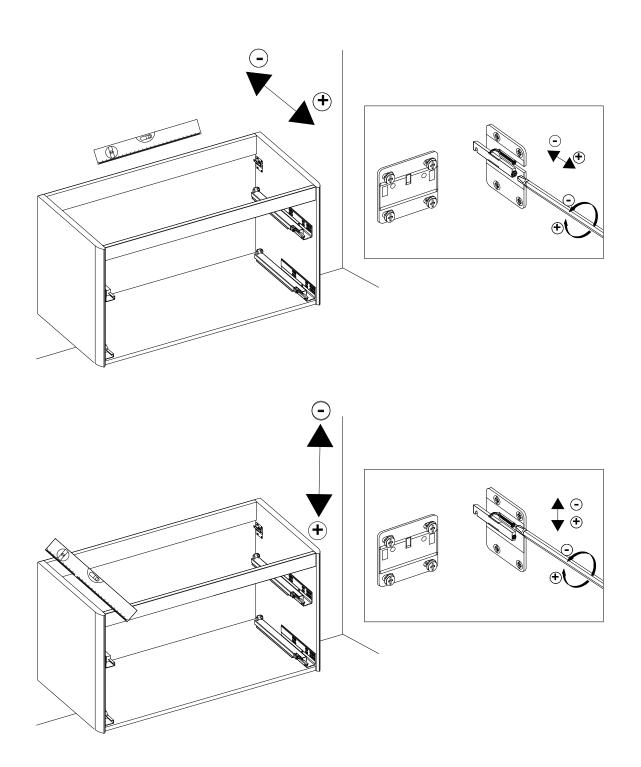





Faucet and silicone are not included. All sizes are subject to tolerance.


Sink assembly

Install the faucet to the top and drains to the sink. Refer to the faucet and drain manufacturer's instructions. Complete the faucet connections. Run water and check for leaks.

Apply a bead of silicone behind the top surface to the finished wall.


CERAMIC BASIN ART. 50202


Top view of sink

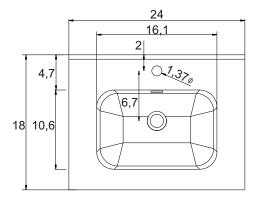

CERAMIC BASIN ART. 50201


Top view of sink

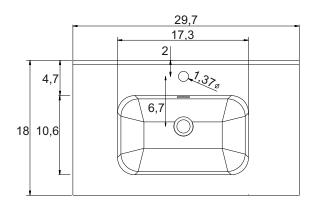

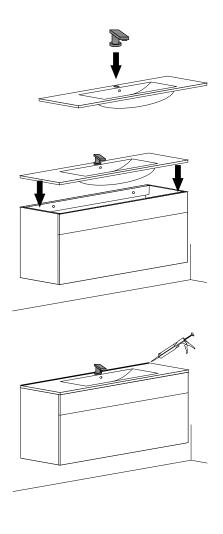

CERAMIC BASIN ART. 50200

Top view of sink

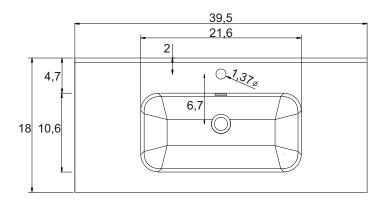



Faucet and silicone are not included. All sizes are subject to tolerance.


Sink assembly

Install the faucet to the top and drains to the sink. Refer to the faucet and drain manufacturer's instructions. Complete the faucet connections. Run water and check for leaks.

Apply a bead of silicone behind the top surface to the finished wall.


RESIN BASIN ART. 50203

Top view of sink

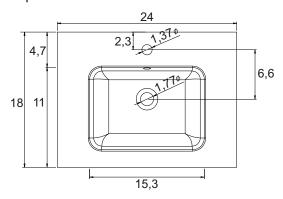


RESIN BASIN ART. 50169

Top view of sink

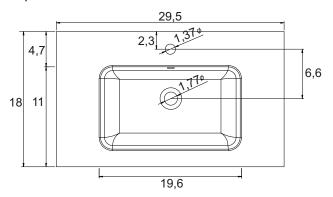

RESIN BASIN ART. 50170

Top view of sink

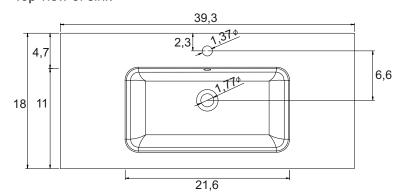





Faucet and silicone are not included. All sizes are subject to tolerance.


Sink assembly

Install the faucet to the top and drains to the sink. Refer to the faucet and drain manufacturer's instructions. Complete the faucet connections. Run water and check for leaks.

Apply a bead of silicone behind the top surface to the finished wall.


SOLID SURFACE TOP ART. 50204 - 50208

Top view of sink

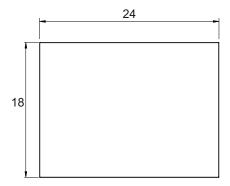


SOLID SURFACE TOP ART. 50205 - 50209

Top view of sink

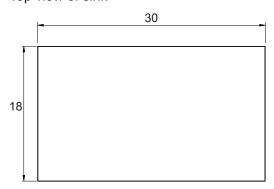



SOLID SURFACE TOP ART. 50206 - 50210

Top view of sink

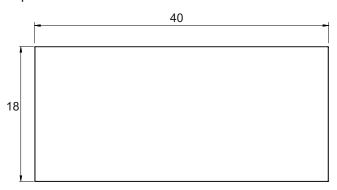

CERAMIC BASIN ART. 50179

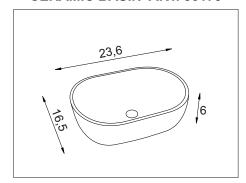

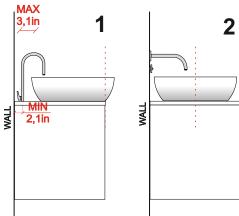

SOLID SURFACE BASIN ART. 50184

